

# Installation Guide

Unmanaged Desktop PoE Switch

### **LED Explanation**

rer Po

On: Power on

PoE Status

Port 1–4 (for TL-SF1008LP/TL-SF1008P)/ Port 1–8 (for TL-SF1009P/TL-SL1210MP)

On: PoE power provided

Flashing: Current-overload/ Short-circuit Off: No PoE power provided

Link/Act

Link/Act

Port 1–8/Port 1–9 (for TL-SF1009P)/ Uplink 1, Uplink2 (for TL-SL1210MP)

On: Link present but no activity
Flashing: Transmitting/receiving data
Off: No link

#### PoE MAX

O PoE MA

TL-SF1008LP

On: 34 W ≤ Total power supply < 41 W Flashing: Total power supply = 41 W Off: Total power supply < 34 W

TL-SF1008P

On: 59 W ≤ Total power supply < 66 W Flashing: Total power supply = 66 W Off: Total power supply < 59 W

TL-SF1009P

On: 58 W ≤ Total power supply < 65 W Flashing: Total power supply = 65 W Off: Total power supply < 58 W

TL-SL1210MP

On: 117 W ≤ Total power supply < 124 W Flashing: Total power supply = 124 W Off: Total power supply < 117 W

 
## **Switches Explanation**

Extend (1-4) (for TL-SF1008LP/TL-SF1008P)

Off On Extend (1-4)

Off: Port 1–4 run at 10/100 Mbps and support PoE power supply up to 100 m away. On: Port 1–4 run at 10 Mbps and support PoE power supply up to 250 m away.

Priority (1-2)/Priority (except TL-SL1210MP)



Off: All the ports transmit data with the same priority.

On/On (1-2): Port 1–2 transmit data with a higher priority than other ports.

Extend (for TL-SF1009P and TL-SL1210MP)

On(1-4) On(1-8)
Off-Extend

Off: Port 1–8 run at 10/100 Mbps and support PoE power supply up to 100 m away.
On (1-4): Port 1–4 run at 10 Mbps and support PoE power supply up to 250 m away.
On (1-8): Port 1–8 run at 10 Mbps and support PoE power supply up to 250 m away.


Isolation (for TL-SF1009P and TL-SL1210MP)



Off: Port 1-8 can transmit data with every port.

On (1-8): Port 1–8 cannot transmit data with each other. They can transmit data only with the uplink port.

Note: For simplicity, we will take TL-SF1008P for example throughout the Guide.

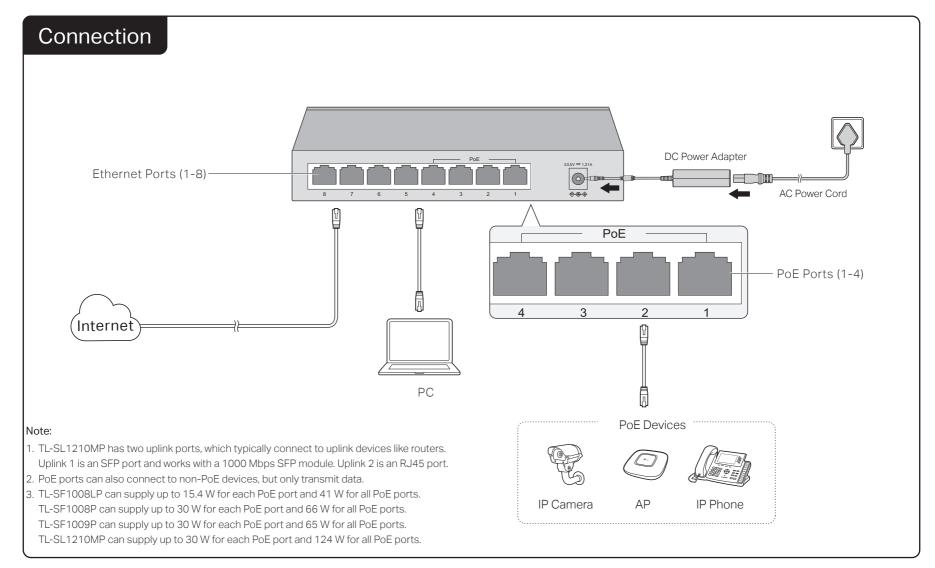

# Frequently Asked Questions (FAQ)

### Q1. The Power LED is not lit.

The Power LED should be lit when the power system is working normally. If the Power LED is not lit, please check as follows:

A1: Make sure the AC power cord is connected the switch with power source properly.

A2: Make sure the voltage of the power supply meets the requirements of the input voltage of the switch.

A3: Make sure the power source is on.

### Q2. The Link/Act LED is not lit when a device is connected to the corresponding port.

It is recommended that you check the following items:

A1: Make sure that the cable connectors are firmly plugged into the switch and the device.

A2: Make sure the connected device is turned on and working well.

A3: The cable must be less than 100 meters long (328 feet). If Extend Mode is enabled, it should be less than 250 meters (820 feet).

### Q3. Why are PoE ports not supplying power for PoE devices?

When the total power consumption of connected PoE devices exceeds the maximum, the PoE port with a smaller port number has a higher priority. The system will cut off power to the ports with larger port numbers to ensure supplying to other ports.

Take TL-SF1008P as an example. If port 1, 2 and 4 are consuming 15.4 W respectively, and an additional PoE device with 20 W is inserted to port 3, the system will cut off the power of port 4 to compensate for the overload

## **Specifications**

### **General Specifications**

	IEEE 802.3i, IEEE 802.3u, IEEE 802.3x, IEEE 802.3af,
Standard	IEEE802.3at (Except TL-SF1008LP)
	IEEE 802.3ab (Only for TL-SL1210MP)
	IEEE 802.3z (Only for TL-SL1210MP)
Protocol	CSMA/CD
Interface	TL-SF1008LP/TL-SF1008P:
	8 10/100 Mbps RJ45 Ports
	Auto-Negotiation/Auto MDI/MDIX
	PoE Ports: Port 1–4
	TL-SF1009P:
	9 10/100 Mbps RJ45 Ports
	Auto-Negotiation/Auto MDI/MDIX
	PoE Ports: Port 1–8
	TL-SL1210MP:
	8 10/100 Mbps RJ45 Ports
	Auto-Negotiation/Auto MDI/MDIX 1 10/100/1000 Mbps RJ45 Port
	1 1000 Mpbs SFP Port
	PoE Ports: Port 1–8
Network Media (Cable)	10BASE-T:
	UTP category 3, 4, 5 cable (maximum 100 m)
	EIA/TIA-568 100Ω STP (maximum 100 m)
	100BASE-TX:
	UTP category 5, 5e cable (maximum 100 m)
	EIA/TIA-568 100Ω STP (maximum 100 m)
	1000BASE-T (Only for TL-SL1210MP):
	UPT category 5e cable or above (maximum 100m)
	EIA/TIA-568 100 $\Omega$ STP (maximum 100 m)
	1000BASE-SX/LX/LX10/BX10 (Only for TL-SL1210MP):
	MMF, SMF
Switching Capacity	TL-SF1008LP/TL-SF1008P: 1.6 Gbps
	TL-SF1009P: 1.8 Gbps
	TL-SL1210MP: 5.6 Gbps
MAC Address Table	2K
Transfer Method	Store-and-Forward
MAC Address Learning	Automatically learning, automatically aging
Power Supply	External Power Adapter
	Input: 100-240 VAC, 50/60 Hz
	Output:
	TL-SF1008LP: 53.5 VDC/0.81 A
	TL-SF1008P/TL-SF1009P: 53.5 VDC/1.31 A
	TL-SL1210MP: 53.5 VDC/2.43 A
Wall Mountable	Yes
Distance Between	TL-SF1008LP/TL-SF1008P/TL-SF1009P: 105 mm
Mounting Holes	TL-SL1210MP: 150 mm

### To ask questions, find answers, and communicate with TP-Link users or engineers, please visit https://community.tp-link.com to join TP-Link Community. For technical support and other information, please visit







## **Environmental and Physical Specifications**

Certification	FCC, CE, RoHS
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Operating Humidity	10% to 90% non-condensing
Storage Humidity	5% to 90% non-condensing

#### PoE Disclaimer

The speed of the ports in extend mode will downgrade to 10 Mbps. The actual transmission distance may vary due to power consumption of PoE-powered devices or the cable quality

PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.

### **EU Declaration of Conformity**

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863

The original EU declaration of conformity may be found at https://www.tp-link.com/en/ce.

### Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Place the device with its bottom surface downward.



